


# How to switch your router to wireless AP mode?

## Step 1

Connect your computer to your router, and visit <http://tendawifi.com> or <http://192.168.0.1> to log in to the router's web UI.


## Step 2

After logging in, please click **More**.

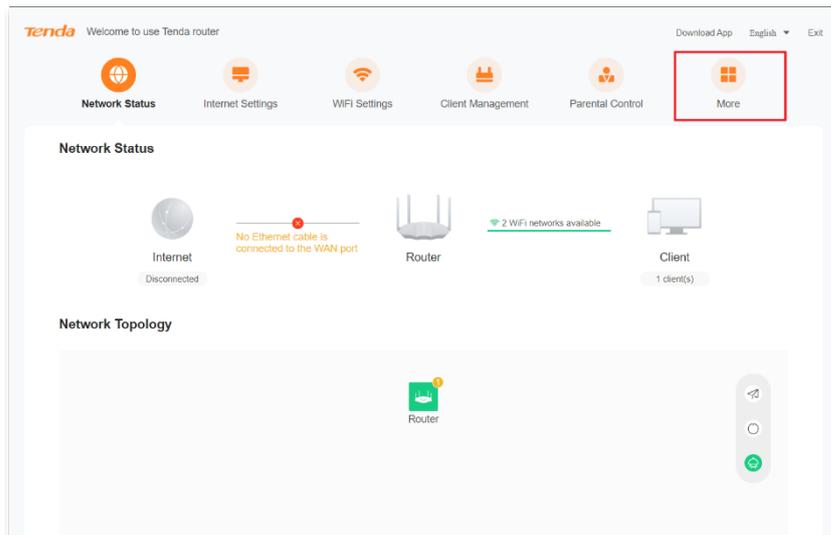


## Step 3

Click **Working Mode** and find **Client+AP** mode. Click **Switch Mode**.

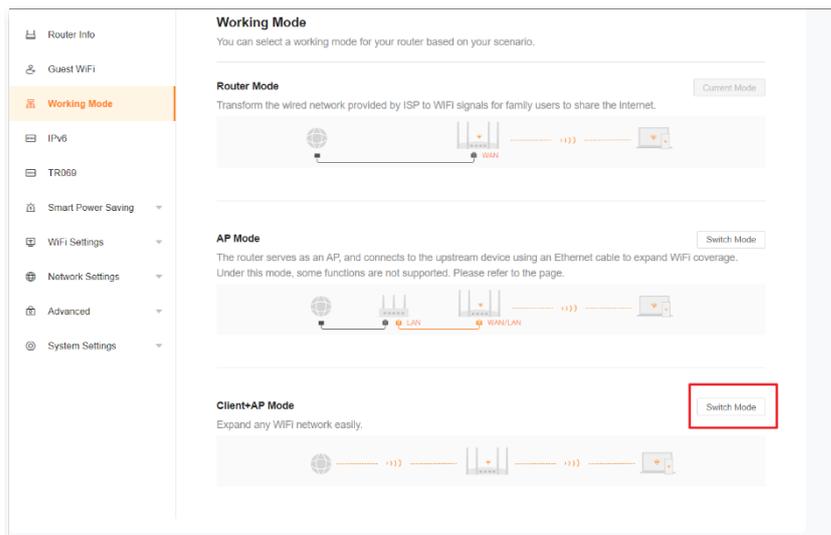



## Step 4

Click **OK** to continue.

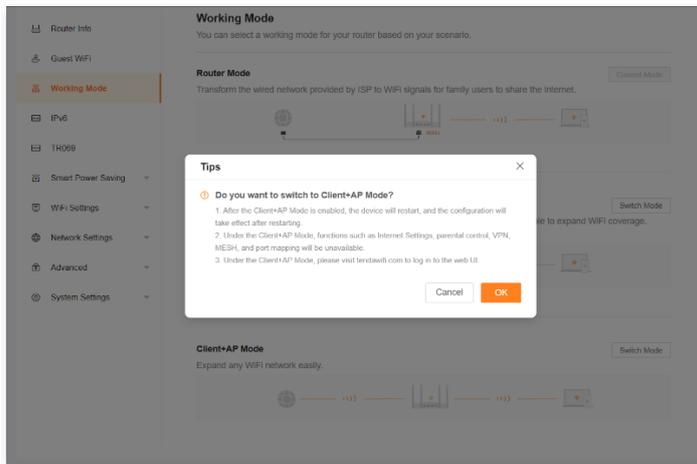

## Step 5


Select the Wi-Fi to extend and enter the Wi-Fi password (If there is a password).

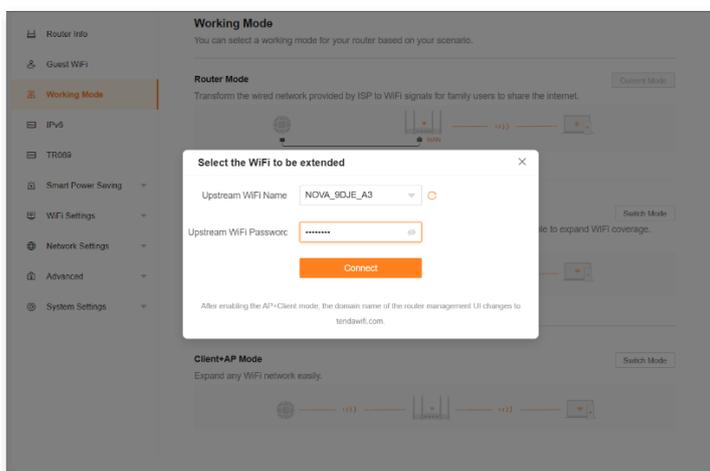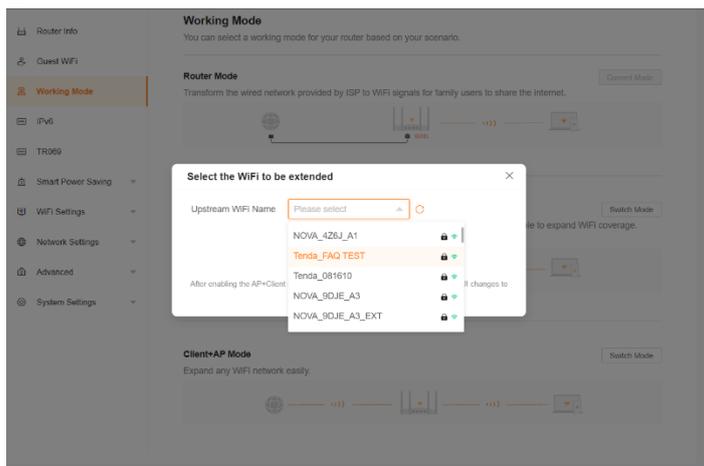

After filling in the password and confirming that the Wi-Fi password is correct, click **Connect**.


## Step 6

Wait for the router to reboot.

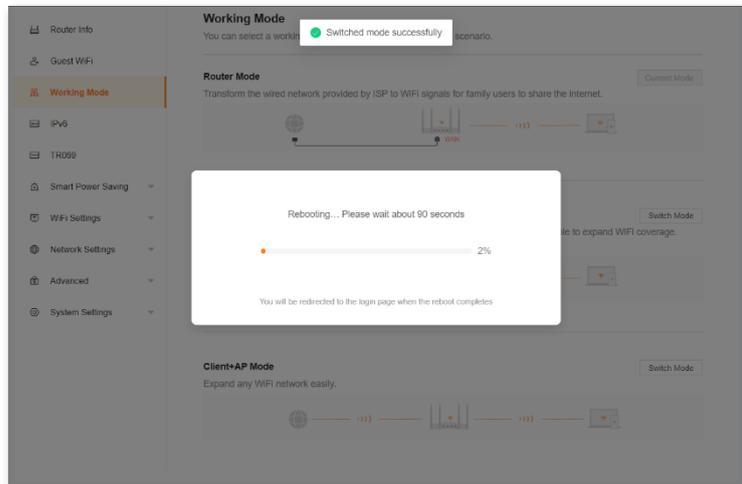


## Step 7

At this time, you will be redirected to the router login page.

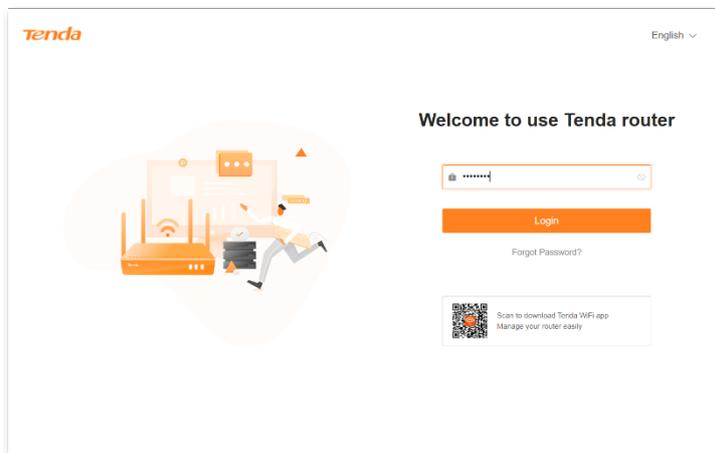

Log in again and you will find that it has been successfully set to wireless AP mode.

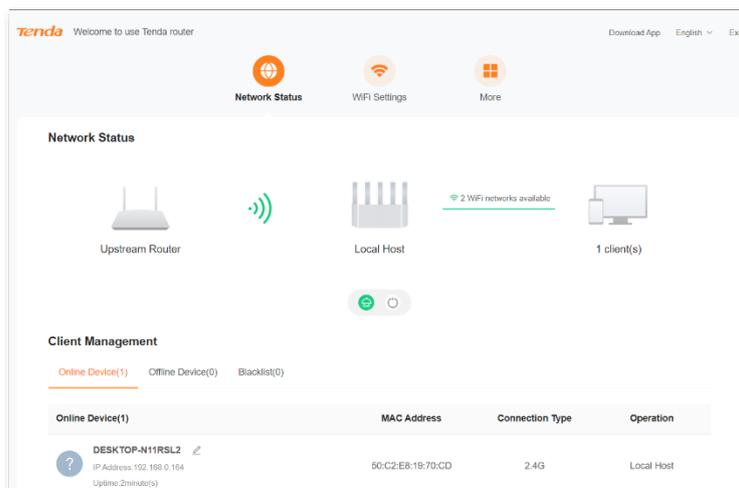

If above steps could not solve your problem, please contact our technical support.

Contact us: [Contact Us Tenda-All For Better NetWorking](#)